 


# AURA<sup>®</sup> THRESHOLD PLATE

## FITTING GUIDE **4505**

### AAS4505

LENGTH:



#### CONTENTS

- AAS4505 threshold plate with reversible tread strips
- Acoustic bedding pads affixed
- Bag of screws and plugs

#### TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- Power drill
- 6mm masonry drill

For more information please call:

**+44 (0)1626 834252**

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, or photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited.  
© Lorient Polyproducts Ltd 2019

www.lorientgroup.com  
+44 (0) 1626 834252

Lorient Polyproducts Ltd  
Endavour House  
Fairfax Road  
Heathfield Ind Estate  
Newton Abbot  
Devon TQ12 6UD  
United Kingdom

**LORIENT**

**AAS4505  
THRESHOLD  
PLATE**

## INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

### STEP 1

Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.

### STEP 2

Measure the threshold plate and mark the desired length (and profile if cutting around door stop) with a pencil.

### STEP 3

Pull back tread strips and cut the threshold plate to length using a saw.

### STEP 4

Position the plate on the door sill in required location.

### STEP 5

With threshold plate in position, using the pre-drilled countersunk holes, mark hole centres on floor.

Set the plate to one side and using masonry drill, create fixing holes and insert the plugs. Clean away dust.

Screw fix the threshold plate in place using screws supplied. Replace reversible tread strips.

#### Note for exterior applications:

Where threshold plate meets the door stop, sealant should be applied to prevent water ingress.

### STEP 6

Check to ensure the door opens and closes freely.

#### NOTE

For effective operation, the AAS4504, AAS4505, ASS4506, AAS4507 threshold plates require a minimum of 8mm clearance between the door and the floor.

### IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes & latches properly.

### DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers. Lorient reserves the right to make alterations or delete installation detail without prior notice.