

FLOOR 1

MASONRY FLOOR WITH ANGLE FIXINGS

DESCRIPTION

- 1 Independent duct fixing complete with breakaway joints
 - 2 Lorient intumescent sealant around spiral casing to a maximum clearance of 10mm
 - 3 LVHC44 air transfer grille
 - 4 Supporting angles (25 x 25 x 1mm)
 - 5 **Fixing angle:** 40 x 40 x 1mm thick minimum galvanised steel angles fixed to LVHC44 unit with self tapping screws and to wall with masonry anchors
- Fixing option 1 - for less than 200mm diameter:** supporting/mounting angles, at three points on the edge of the LVHC44 air transfer grille
- Fixing option 2 - for greater than 200mm diameter:** supporting/mounting angles, at four points on the edge of the LVHC44 air transfer grille


CONTENTS

- LVHC44 air transfer grille

TOOLS REQUIRED

- Self tapping screw (3.2mm x 16mm)
- Supporting angles 25 x 25 x 1mm
- Mounting angles 40 x 40 x 1mm
- Lorient intumescent sealant

Note: If no reticulating ductwork is above the slab a protective and load-bearing grate is necessary.

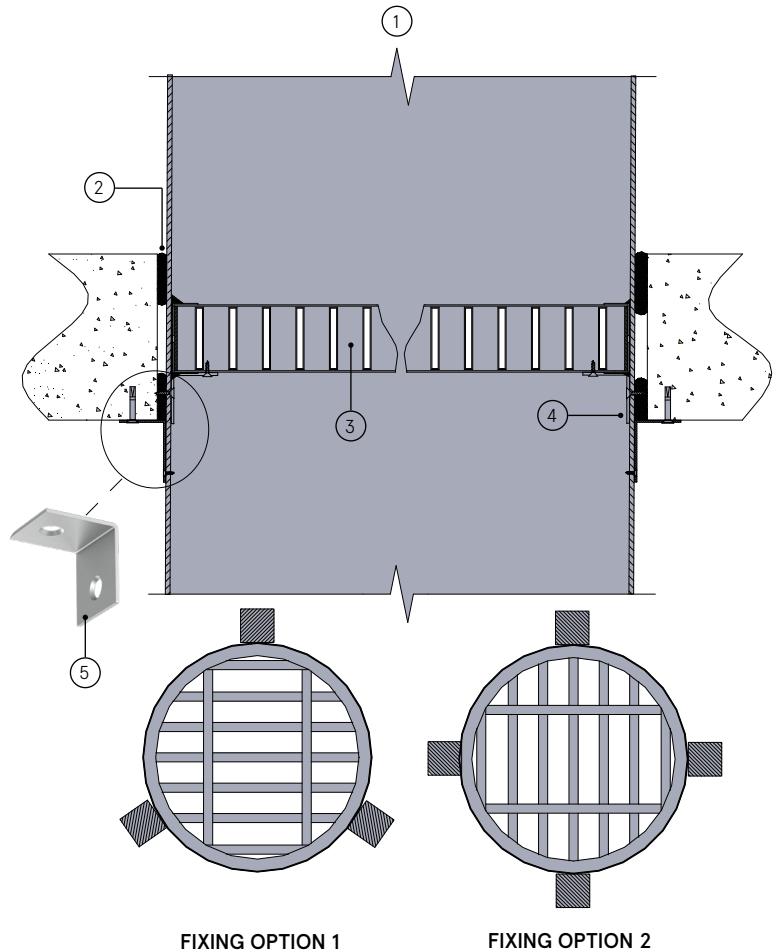

Masonry floor with angle fixings

FR120

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref

WFRC C121316 (OF1)

Max single cell size

600mm diameter

LVHC44 air transfer grilles are supplied 2mm less than the nominal size e.g. a 300mm is actually 298mm.

INSTALLATION INSTRUCTIONS

- ▶ Fix the three or four supporting angles into the duct section using self tapping screws.
- ▶ Fix the LVHC44 into duct and seal around the perimeter with intumescent sealant.
- ▶ Fix to supporting angles with 3.2 x 16mm self tapping screws.
- ▶ Fix the three or four mounting angles onto the outside of the duct section using self tapping screws.
- ▶ Insert air transfer grille into masonry floor opening (note: LVHC44 does not have to be centrally positioned in the opening).
- ▶ Fix the three or four mounting angles depending on the diameter, to the masonry floor with masonry anchors.
- ▶ Apply a bead of Lorient intumescent sealant around the perimeter of metal sleeve as shown (note: maximum annular clearance of 10mm applies).
- ▶ Connect ductwork directly to metal sleeve using approved breakaway connections to ensure compliance.