


LAS3008 SI DOOR BOTTOM SFAL

FITTING GUIDE

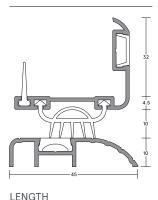

CONTENTS

- Threshold plate

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Knife
- . Saw, hand or power

NOTE

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is

LAS3008 si door bottom seal

- · Bag of screws

- . Drill, hand or power
- Screwdriver

fitted, closes and latches properly.

INSTALLATION DETAIL

NOTE

It is not necessary to remove the door from the hinges and no painting is required after installation. This seal may be fixed to either side of the door bottom. Allow a minimum gap of 26mm between the door bottom and the door sill.

STEP 1

For the seal fitted to the door bottom.

Remove the seal from the packaging and with the door closed, measure the width of the door bottom on the side of the door to which the seal is to be fixed.

NOTE

If the carrier is to be screw fixed to the stop side of the door, then the face of the aluminium carrier will have to be checked out by the width of the door stop (at each end) to ensure that it does not bind and stop the door from closing and latching.

STEP 2

Remove the decorative cover strip and pull back silicone gaskets from the aluminium carrier. Then measure, mark and cut the aluminium carrier to the required length.

STEP 4

Cut the decorative cover strip and silicone gaskets to length required. (Continue with the door bottom seal after fitting the threshold).

STEP 5

For the threshold plate. Remove the packaging and measure the door width between jambs to determine the required plate length.

STEP 6

Measure, mark and cut the threshold plate and screw cover to length.

STEP 7

Position the plate on the door sill in required location.

STEP 8

Using a power drill with a 4.5mm drill bit, create fixing holes in the plate at the required fixing positions.

STEP 9

With the plate in position, mark hole centres on the floor. Using a masonry drill, create fixing holes. Clean away the dust and insert supplied plastic plugs.

STEP 10

Screw fix, then fit the snap on cover to hide screw heads. (Where threshold plate meets the door stop, sealant may be applied to prevent water ingress).

STEP 11

For the seal fitted to the door bottom. Apply the door bottom seal to the lower edge. Mark out the slotted hole locations with a pencil ensuring the flexible gasket blades lightly compress against the fixed threshold plate.

STEP 12

Drill pilot fixing holes with a 2.5mm drill bit.

STEP 13

With the screws provided fix the seal to the bottom of the door leaf. (For uneven gaps, slight adjustment can be made via the slotted holes prior to tightening the fixing screws.)

STEP 14

Refit the decorative cover strip and check to ensure the door can open and close properly.

NOTE

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

V1

LORIENT

Lorient Polyproducts Ltd Endeavour House Fairfax Road Heathfield Ind Estate Newton Abbot Devon TQ12 6UD United Kingdom

+44 (0)1626 834252 www.lorientgroup.com

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2019

For more information please call: