


LAS1030 COMPRESSION SEAL FITTING GUIDE



LENGTH _____

CONTENTS

- LAS1030 compression seal

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Scissors, knife or snips

NOTE

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

NOTE

Min/max recommended gap size is 2mm/4mm.

Clean any talc from the seal before removing the backing to self adhesive tape to prevent migration of the talc to the adhesive surface.

STEP 1

Ensure that all contact surfaces are clean, dry and free from surface dust. If painted, the surfaces must be well cured.

STEP 2

Remove the seal from the packaging and measure the top and sides of the door frame (or perimeter of the window) to determine the seal length required.

STEP 3

Separate coils of seal and trim the seal to the lengths required.

STEP 4

Progressively remove the protective backing off the self adhesive 30cm to 40cm at a time. Position seal and run a finger down the profile, ensuring that the adhesive sticks evenly to the frame in the exact location where the seal is required.

STEP 5


Close the door and check for a uniform seal around the door.

NOTE

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

IMPORTANT

Do not remove and relocate seal. Do not stretch the seal.

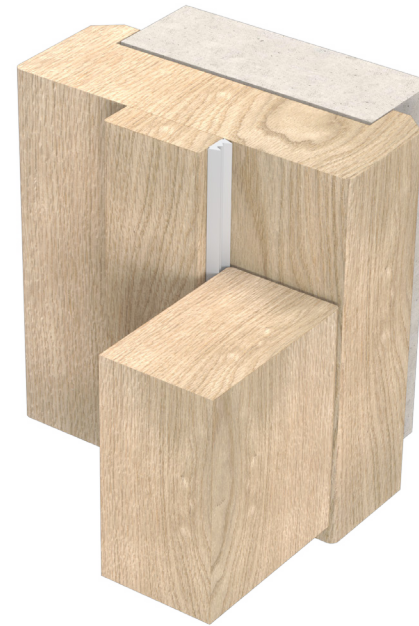

V1



Lorient Polyproducts Ltd
Endeavour House
Fairfax Road
Heathfield Ind Estate
Newton Abbot
Devon TQ12 6UD
United Kingdom

+44 (0)1626 834252
www.lorientgroup.com

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2018